


# The Equipment

**The Desk**

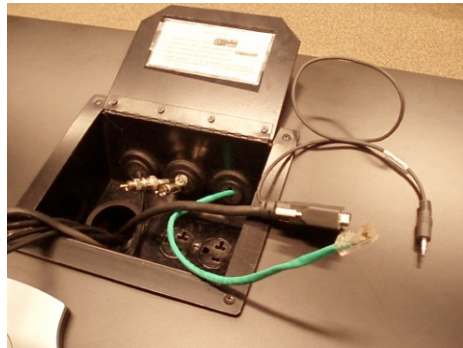

The Laptop Connection is located in the pocket on the top of the Desk behind the monitor.

**In the Right Side of Desk**


USB Ports

Computer Power

Drawer Containing Lapel Microphone, Presentation Clicker, White Board Markers, etc.

To open the drawer, place finger in handle, push handle down and pull out drawer.

DVD Power

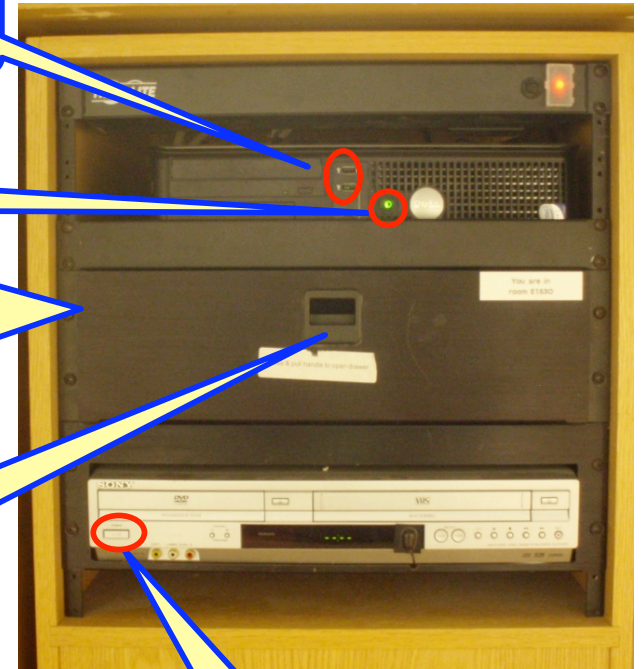

# Crestron Control

## Exit

Shuts down the projectors, puts up the screens and exits the Crestron Control Panel. NOTE: This does not log off of the computer.

## Lighting Control

Let's you select 3 lighting options in the room.

## Sub menus

This area displays the menu options for whichever button you have pressed.

## Projector


Let's you turn the projector on/off and mute the image displayed

## Screen

Let's you put the projector screen up or down.

## Volume

Let's you control audio levels for the system and the microphone.

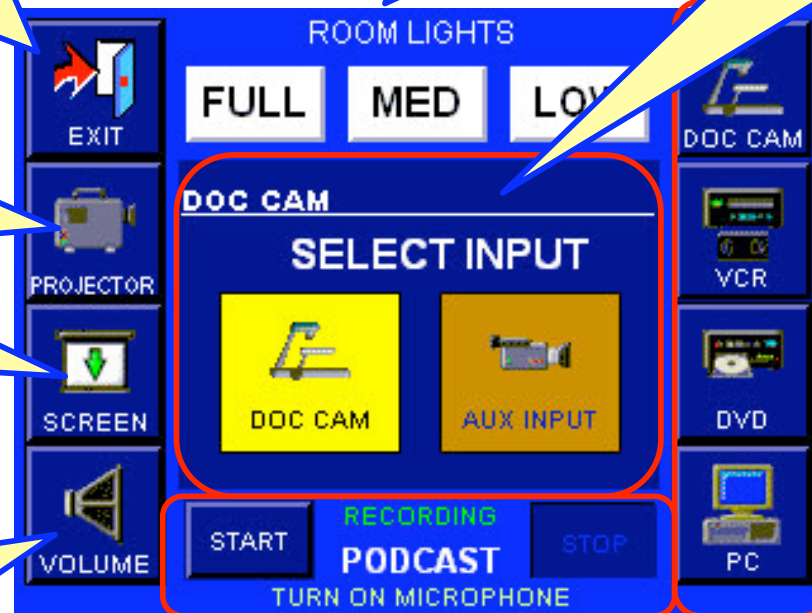

## Podcast

This area is used for making audio recording and requires the use of the room's lapel microphone.

## Source Buttons

Let's you select which source you would like to project and will bring up sub menus that contain operation controls.